

Why use a DrumQuik® PRO?

SAFETY

Minimize spills, fumes and environmental impact.

PERFORMANCE

High flow capacity.

EASY

Intuitive locking ring design for quick connection.

DURABILITY

Built to withstand harsh operating conditions.

FDA MATERIALS

Suitable for transfer of food products.

VAPOR MANAGEMENT

Ported vent allows control of fumes, blanket gas connection or pressure dispensing.

ECONOMIC

Low cost for high volume, single-trip containers.

RECYCLABLE MATERIALS

Allow easy disposal with containers.

NORTH AMERICA

Phone: +1 (651) 645-0091
Toll Free: +1 (800) 444-2474

EUROPE

Phone: +49 6105 9743-003

ASIA PACIFIC

Phone: +86 21 2411 2666
Toll Free: +86 400 990 1978



Visit our website
cpcworldwide.com



Visit our DrumQuik PRO page
cpcworldwide.com/DrumQuik-PRO

WARRANTY: All sales are subject to Colder Products Company's limited express warranty set forth in the CPC catalog. Visit cpcworldwide.com/warranty for more information.

COPYRIGHT © 2025 BY COLDER PRODUCTS COMPANY. CPC, Colder Products Company, and Colder Products are registered trademarks with the United States Patent and Trademark Office. For detailed trademark and patent information, please visit: cpcworldwide.com/trademarks.


WARNING: Due to the wide variety of possible fluid media and operating conditions, unintended consequences may result from the use of this product, all of which are beyond the control of CPC. It is the user's responsibility to carefully determine and test for compatibility for use with their application. All such risks shall be assumed by the buyer.



DrumQuik® PRO

Dispensing System for Professional Chemical Management

SYSTEM INSTALLATION GUIDE

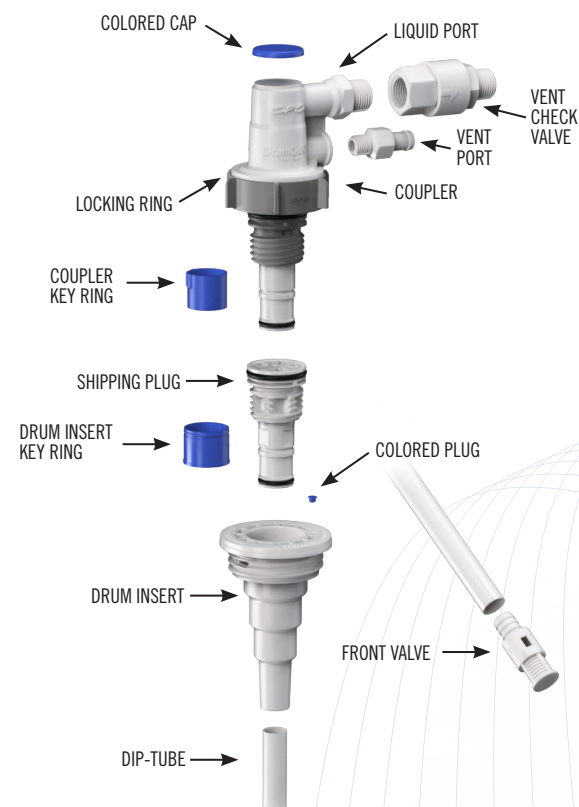

Chemical Dispensing Made Easy

Simple steps to install and use the DrumQuik® PRO



INSTALLATION

The DrumQuik® PRO drum insert assembly replaces one of the drum's bung plugs and is torqued and shipped as part of the drum package.



1. Fully press dip-tube into drum insert socket.



2. Place the drum insert assembly in drum.



3. Torque insert with drum wrench or 1/2" drive torque wrench and a CPC torque socket tool (CPC PN 2408900).

Note: Contact CPC for torque recommendations at info@cpcworldwide.com

DISPENSING

Remove the shipping plug from the drum insert assembly, then connect the DrumQuik® PRO coupler, locking it into place.



1. Turn shipping plug counterclockwise to remove. (Use a large flat blade, #4 Phillips screwdriver or coin).



2. Insert coupler into drum insert assembly.



3. Turn the coupler locking ring clockwise until stop is reached (approximately 2 full turns); valve is opened during this process.

VAPOR MANAGEMENT

Three vapor management options:

1. Fully open to vent vapors to the atmosphere.
2. Connect CPC check valve (e.g. 2879800) to allow make-up air in, without allowing fumes to escape.
3. Connect a CPC quick disconnect coupling for blanket gas (N_2 , CO_2) or for pressure dispensing.



1. Vent port fully open.



2. Vent port outfitted with a CPC check valve.



3. Vent port shown with a CPC quick disconnect coupling.